

Axis Beam 2R 15 Ch Mode

DMX Channel	Function	Description	Value
1	Pan	Pan Course	0-255
2	Tilt	Tilt Course	0-255
3	Pan Fine	Pan Fine	0-255
4	Tilt Fine	Tilt Fine	0-255
5	Pan/Tilt Speed	Pan and Tilt Speed	0-255
6	Shutter	Closed	0-4
		Strobe (slow to fast)	5-250
		Open	251-255
7	Dimmer	Dimmer off to full	0-255
8	Auto Run	No Function	0-128
		Demo Programs (hold for 6 seconds)	129-255
9	Color	Open	0-9
		Red	10-19
		Highlite Yellow	20-35
		Dark Blue	30-39
		Green	40-49
		Orange	50-59
		Purple	60-69
		Pink	70-79
		Light Blue	80-89
		CTO	90-99
		Congo Blue	100-109
		Lime Green	110-119
		CTB	120-129
		Counter Clockwise Color Scroll (Slow to Fast)	130-191
		Clockwise Color Scroll (Slow to Fast)	192-255

10	Gobo	Open	0-4
		Gobo 1	5-9
		Gobo 2	10-14
		Gobo 3	15-19
		Gobo 4	20-24
		Gobo 5	25-29
		Gobo 6	30-34
		Gobo 7	35-39
		Gobo 8	40-44
		Gobo 9	45-49
		Gobo 10	50-54
		Gobo 11	55-59
		Gobo 12	60-64
		Gobo 13	65-69
		Gobo 14	70-71
		Clockwise Color Scroll (Fast to Slow)	72-113
		Open	114-118
		Counter Clockwise Color Scroll (Slow to Fast)	119-160
		Open	161-165
		Gobo 1 Shake (Slow to Fast)	166-172
		Gobo 2 Shake (Slow to Fast)	173-179
		Gobo 3 Shake (Slow to Fast)	180-186
		Gobo 4 Shake (Slow to Fast)	187-193
		Gobo 5 Shake (Slow to Fast)	194-200
		Gobo 6 Shake (Slow to Fast)	201-207
		Gobo 7 Shake (Slow to Fast)	208-214
		Gobo 8 Shake (Slow to Fast)	215-221
Gobo 9 Shake (Slow to Fast)	222-228		
Gobo 10 Shake (Slow to Fast)	229-235		
Gobo 11 Shake (Slow to Fast)	236-242		
Gobo 12 Shake (Slow to Fast)	243-249		
Gobo 14 Shake (Slow to Fast)	250-255		
11	Prism	No Function	0-127
		Prism Engage	128-255
12	Prism Rotation	Rotation Index	0-127
		Clockwise Prism Rotation (Slow to Fast)	128-190
		Stop	191-192
		Counter Clockwise Prism Rotation (Slow to Fast)	193-255
13	Focus	Focus	0-255
14	Reset	No Function	0-76
		Position Reset (hold for 3 seconds)	77-127
		Fixture Reset (hold for 3 seconds)	128-255
15	Lamp Control	No Function	0-25
		Lamp Off (hold for 3 seconds)	26-100
		Lamp On (hold for 3 seconds)	101-255