

Axis Beam 7R 16 Ch Mode

DMX Channel	Function	Description	Value
1	Pan	Pan Course	0-255
2	Tilt	Tilt Course	0-255
3	Pan Fine	Pan Fine	0-255
4	Tilt Fine	Tilt Fine	0-255
5	Pan Speed	Pan Speed (Fast to Slow)	0-255
6	Tilt Speed	Tilt Speed (Fast to Slow)	0-255
7	Dimmer	Dimmer off to full	0-255
8	Shutter	Open	0-50
		Strobe (slow to fast)	51-240
		Open	241-255
9	Frost	No Function	0-1
		Frost (clear to frost)	2-255
10	Color	Open	0-11
		Red	12-23
		Highlite Yellow	24-35
		Blue	36-47
		Green	48-59
		Orange	60-71
		Purple	72-83
		Pink	84-95
		Dark Blue	96-107
		Yellow	108-119
		Light Blue	120-131
		Lime Green	132-143
		CTO	144-155
		CTB	156-167
		Aqua	168-185
		Clockwise Color Scroll (Slow to Fast)	186-219
Counter Clockwise Color Scroll (Slow to Fast)	220-255		
11	Gobo	Open	0-3
		Gobo 1	4-7
		Gobo 2	8-11
		Gobo 3	12-15
		Gobo 4	16-19
		Gobo 5	20-23
		Gobo 6	24-27
		Gobo 7	28-31
		Gobo 8	32-35
		Gobo 9	36-39
		Gobo 10	40-43
		Gobo 11	44-47
		Gobo 12	48-51
		Gobo 13	52-55
		Gobo 14	56-60
		Gobo 15	61-63

11	Gobo	Gobo 16	64-67
		Gobo 17	68-71
		Clockwise Color Scroll (Fast to Slow)	72-113
		Open	114-118
		Counter Clockwise Color Scroll (Slow to Fast)	119-160
		Open	161-165
		Gobo 1 Shake (Slow to Fast)	166-171
		Gobo 2 Shake (Slow to Fast)	172-177
		Gobo 3 Shake (Slow to Fast)	178-183
		Gobo 4 Shake (Slow to Fast)	184-189
		Gobo 5 Shake (Slow to Fast)	190-195
		Gobo 6 Shake (Slow to Fast)	196-201
		Gobo 7 Shake (Slow to Fast)	202-207
		Gobo 8 Shake (Slow to Fast)	208-213
		Gobo 9 Shake (Slow to Fast)	214-219
		Gobo 10 Shake (Slow to Fast)	220-225
Gobo 11 Shake (Slow to Fast)	226-231		
Gobo 12 Shake (Slow to Fast)	232-237		
Gobo 13 Shake (Slow to Fast)	238-243		
Gobo 14 Shake (Slow to Fast)	244-249		
Gobo 15 Shake (Slow to Fast)	250-255		
12	Prism	No Function	0-127
		Prism Engage	128-255
13	Prism Rotation	No Function	0-1
		Clockwise Prism Rotation (Slow to Fast)	2-106
		Counter Clockwise Prism Rotation (Slow to Fast)	107-180
14	Focus	Prism Shake (Slow to Fast)	181-255
		Focus	0-255
15	Lamp Control	No Function	0-100
		Lamp Off (hold for 3 seconds)	101-105
		No Function	106-200
		Lamp ON (hold for 3 seconds)	201-205
16	Reset	No Function	206-255
		No Function	0-254
		Fixture Reset	255